

# SHIVAKI

µC Based Light Controller  
MODEL NO: (SCS-LR)

## ■ Specifications:

|                                |                              |
|--------------------------------|------------------------------|
| <b>Input Voltage</b>           | 230V AC                      |
| <b>Operation voltage range</b> | 85% to 110% of rated voltage |
| <b>Display method</b>          | 16 X 2 LCD display           |

## ■ Feature:

- ✚ RTC Based Light Controller.
- ✚ Range 00:00 TO 23:59 HH:MM

## ■ Settings:

You can change ALL value by increment & decrement key; if you want to exit from any step then press ENT key or go to next step by pressing SET key, to save changes press ENT key.

- ✚ Press SET key  
**Display = SET ON 1 TIME**  
Using UP and Down key set the time; from this time relay 1 will activated or 25% output is generated.

- ✚ Press SET key  
**Display = SET OFF 1 TIME**  
Using UP and Down key set the time; at this time relay 1 will deactivated or 25% output will off.

- ✚ Press SET key  
**Display = SET ON 2 TIME**  
Using UP and Down key set the time; from this time relay 2 will activated or 50% output is generated.

- ✚ Press SET key  
**Display = SET OFF 2 TIME**  
Using UP and Down key set the time; at this time relay 2 will deactivated or 50% output will off.

- ✚ Press SET key  
**Display = SET ON 3 TIME**  
Using UP and Down key set the time; from this time relay 3 will activated or 75% output is generated.

- ✚ Press SET key  
**Display = SET OFF 3 TIME**  
Using UP and Down key set the time; at this time relay 3 will deactivated or 75% output will off.

- ✚ Press SET key  
**Display = SET ON 4 TIME**  
Using UP and Down key set the time; from this time relay 4 will activated or 100% output is generated.

- ✚ Press SET key  
**Display = SET OFF 4 TIME**  
Using UP and Down key set the time; at this time relay 4 will deactivated or 100% output will off.

- ✚ Press SET key  
**Display = SET SYSTEM TIME**  
**Using UP & Down Key SET RTC Value**

- ✚ Press SET key  
**Display = SET SYSTEM DATE**  
Using UP and Down key set the DATE.

- ✚ Press SET key  
**Display = SET SYSTEM MONTH**  
Using UP and Down key set the MONTH.

- ✚ Press SET key  
**Display = SET SYSTEM YEAR**  
Using UP and Down key set the YEAR.

- ✚ Press SET key  
**Display = WELCOME MESSAGE**  
Using UP and Down key set the welcome message which will display for 3 sec. when controller is power ON.

